HONDA

INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
CARGO NET **P/N 08L96-S84-100**	**1999 ACCORD** **4-DOOR**	**All 20022**
		Issue Date **SEP 1998**

PARTS LIST

Cargo net

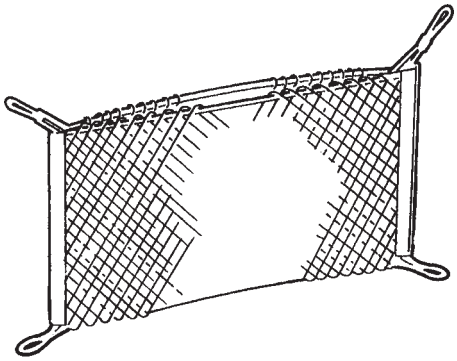

3 Self-tapping screws



3 Hooks

TOOLS REQUIRED

Pliers

INSTALLATION

1. Install the self-tapping screws into the hooks.

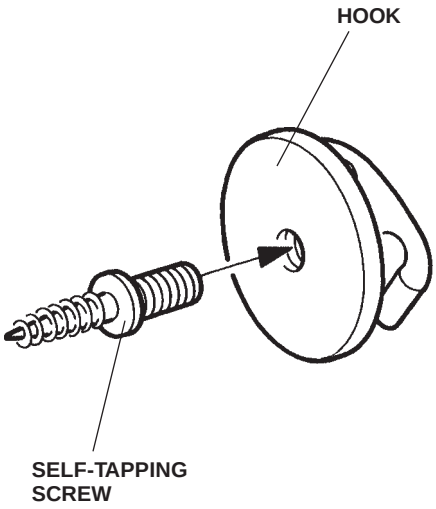

2. Open the trunk lid, and remove the three clips from the trunk lining (two on the left side and one on the right side). Put the clips in the glove box so they can be reinstalled if the cargo net is removed.

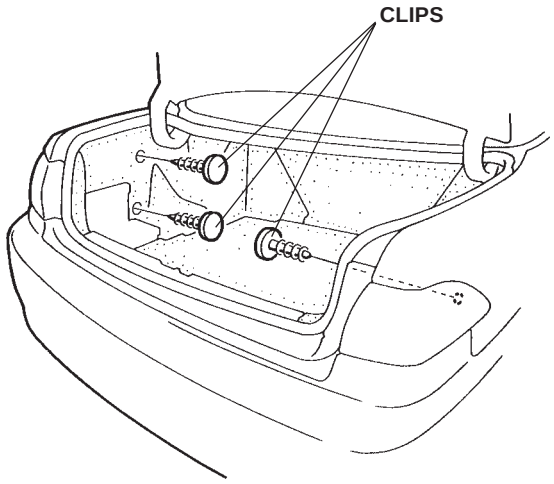

1998 American Honda Motor Co., Inc - All Rights Reserved.

3. Install the hook assemblies into the clip holes in the trunk lining.

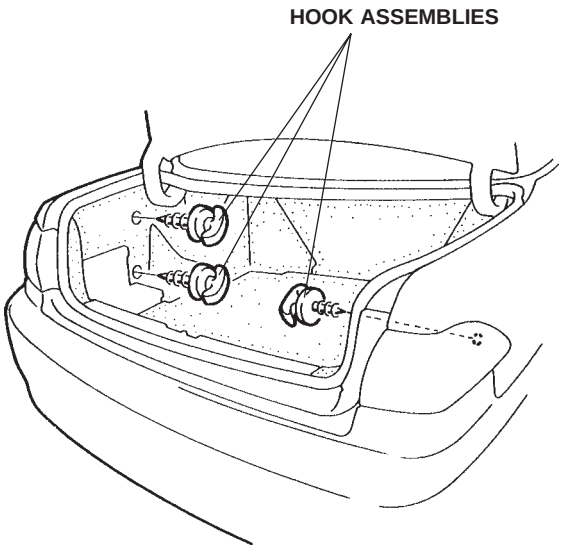

4. Attach the cargo net to the hooks.

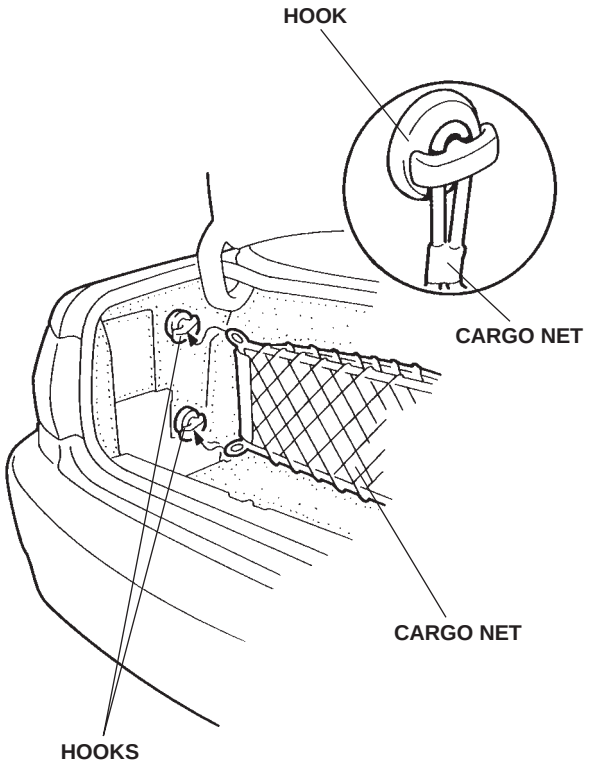

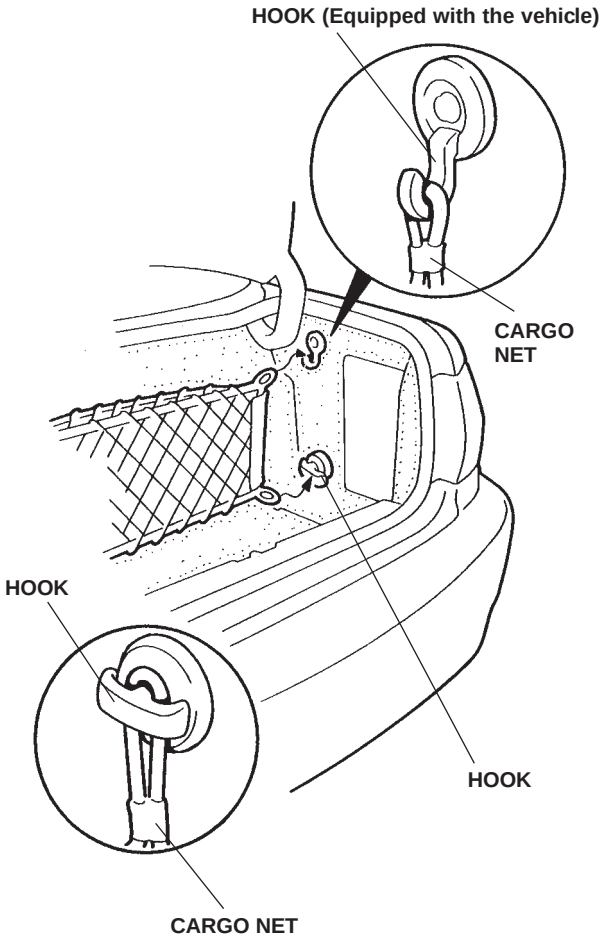

All 20022 (9809)

1998 American Honda Motor Co., Inc - All Rights Reserved.